

Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



Reference number

CD 101 KO5P GR

1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: Art.-Nr.: BT LS CD 1001
for KNX push-button 1-gang ref.-no.: LS CD 10711 ST, LS CD 10911 ST

Duroplastic (scratch-proof) glossy

Colour:
grey

Material:
duroplastic