

# Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



## Reference number

CD 101 KO5P LG

### 1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: Art.-Nr.: BT LS CD 1001  
for KNX push-button 1-gang ref.-no.: LS CD 10711 ST, LS CD 10911 ST

### Duroplastic (scratch-proof) glossy

**Colour:**  
light grey

**Material:**  
duroplastic