

# Product data sheet

Rocker with lens and arrow symbols for KNX push-button 2-gang



## Reference number

CD 102 KO5P GR

## 2-gang rocker with lens and arrow symbols

for JUNG HOME push-button 2-gang, battery-powered, ref.-no.: Art.-Nr.: BT LS CD 1002  
for KNX push-button 2-gang ref.-no.: LS CD 10721 ST, LS CD 10921 ST

## Duroplastic (scratch-proof) glossy

**Colour:**  
grey

**Material:**  
duroplastic