




worldwide.bose.com/Support/HS500



867208-0010

SMART SPEAKER 500

①

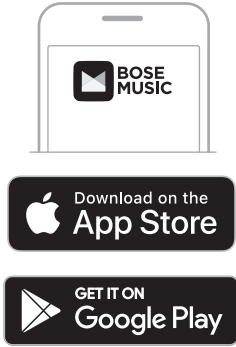


Download the Bose Music app.

Descargue la aplicación
Bose Music.

Téléchargez l'application
Bose Music.

Bose Music アプリを
ダウンロードします。

②

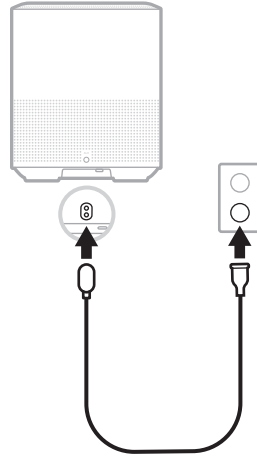


Connect the speaker to power
and follow the app instructions.

Conecte el altavoz al suministro
eléctrico y siga las instrucciones
de la aplicación.

Raccordez l'enceinte à la prise
secteur et suivez les instructions
de l'application.

スピーカーを電源に接続して、
アプリに表示される手順に
従います。

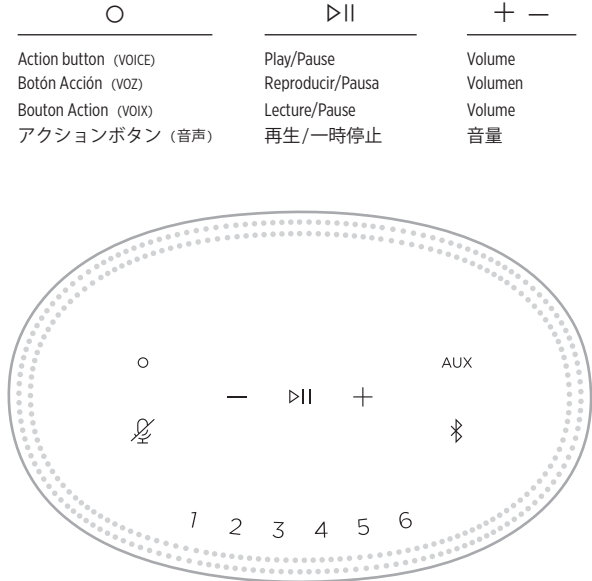

○	▷	+ -
Action button (VOICE) Botón Acción (VOZ) Bouton Action (VOIX) アクションボタン (音声)	Play/Pause Reproducir/Pausa Lecture/Pause 再生/一時停止	Volume Volumen Volume 音量

🔇	1 - 6	📶
Microphone off Micrófono apagado Désactivation du microphone マイクオフ	Presets Ajustes predefinidos Préselections プリセット	Bluetooth®