


Product data sheet

JUNG HOME push-button 1-gang, battery-powered

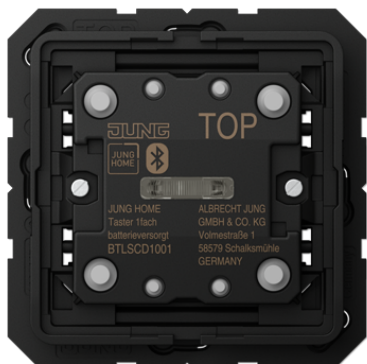

Reference number

BT LS CD 1001

JUNG HOME push-button 1-gang, battery-powered

including mounting plate, adhesive film and fastening screw for rockers ref.-no. .. 101 KO5 .. of the CD and LS ranges available in the 2nd half of 2023

Intended use

- Operation of e.g. blinds/shutters, lighting or fans
- Wireless linking with JUNG HOME system devices
- Mounting on wall box with dimensions according to DIN 49073
- Screw fixing on walls or adhesive fixing on smooth surfaces

Product characteristics

- Commissioning and operation using JUNG HOME app with mobile device (smartphone or tablet) via Bluetooth®
- Top, bottom and full-surface operation with up to 2 linked functions per rocker
- Use the operating buttons to operate wirelessly linked JUNG HOME devices
- Use the operating buttons to control groups, central functions or to call up light scenes
- Multi-coloured status indicator
- Battery status message via LED and JUNG HOME app
- Actuator status feedback via status LED
- Disabling of local operation
- Bluetooth® SIG Mesh for fully encrypted wireless communication and repeater function
- Can be updated using JUNG HOME app

Available in future via update:

(Notes on updates and schedules can be found at www.jung.de/JUNGHOME)

- Use the operating buttons to trigger the disable and override functions

Technical data

Rated voltage:	DC 3 V
Ambient temperature:	-5 ... +45 °C
Stora/transport temperature:	-25 ... +70 °C
Battery type:	1 x Lithium CR 2450N (recommended) or CR 2450
Battery life	typical 4 to 5 years
Radio frequency:	2402.0 ... 2480.0 MHz
Transmitting power:	max. 10 mW, class 1.5
Transmission range	
in buildings:	approx. 30 m